


Batwing Awning - 33100 LH / 33200 RH

Important:

- 1. Check the Rhino-Rack website to ensure you have the latest issue of these instructions.
- 2. Please refer to your fitting instruction to ensure that the roof racks are installed in the correct locations.
- 3. Check the contents of kit before commencing fitment and report any discrepancies.
- 4. Place these instructions in the vehicle's glove box after installation is complete.
- 5. These instructions must be followed for warranty to be upheld.

Fit Time: 15 mins

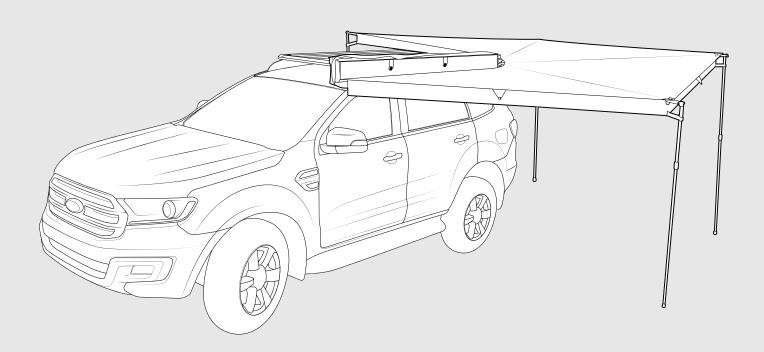

Issue Date: 23/11/2020

33100 LH / 33200 RH Batwing Awning Instructions

Important Information

Recommendations

It is essential that all bolt connections be checked after driving a short distance when you first install your Rhino-Rack Batwing Awning. Bolt connections should be checked again at regular intervals depending on road conditions, usage, loads and distances travelled. You should also check the roof bars each time they are refitted.

Use only non-stretch fastening ropes or straps.

Please remove Batwing Awning and crossbars when putting vehicle through an automatic car wash.

Do not stow away the awning for long periods if it is wet. You must allow the awning material to dry completely before storing for extended periods of time. When rolling up the awning, avoid excessive bunching up of the material before stowing. The awning should be rolled up as neatly as possible following the instruction on page 9.

Torque settings

Unless stated otherwise in these instructions, all fasteners should be set to the following torque settings - M6: 4-5Nm (3-4lbs/ft), M8: 8-10Nm (6-7.5lbs/ft) and M10: 16-18Nm (12-13lbs/ft).


Load Ratings

With the addition of the Batwing Awning, the load capacity of your crossbars will have to be adjusted accordingly. The Batwing Awning with mounting brackets weighs approximately 20kg.


Note for Dealers and Fitters


It is your responsibility to ensure this fitting instruction is given to the end user or client It is your responsibility to ensure these fitting instructions are given to the end user or client. These instructions remain the property of Rhino-Rack Australia Pty. Ltd. and may not be used or changed for any other purpose than intended.

Critical Dimensions

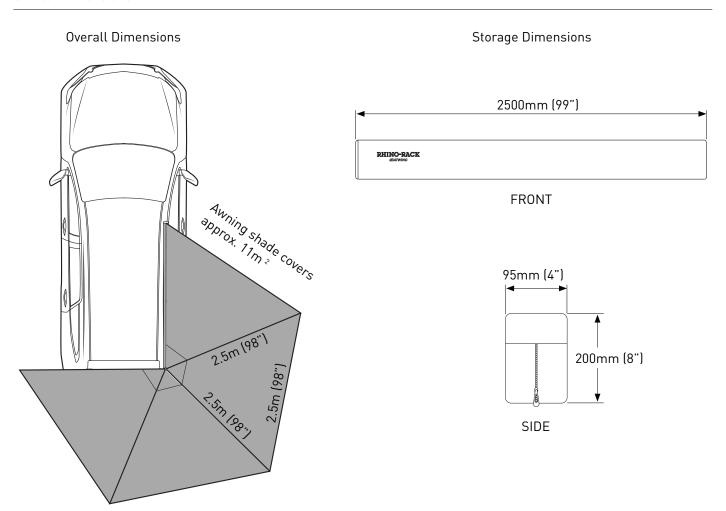



33100 LH / 33200 RH Batwing Awning Instructions

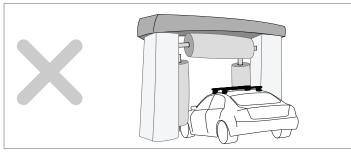


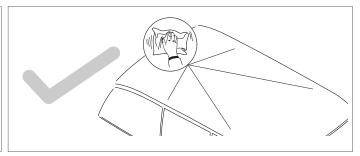




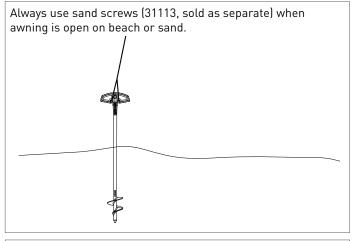

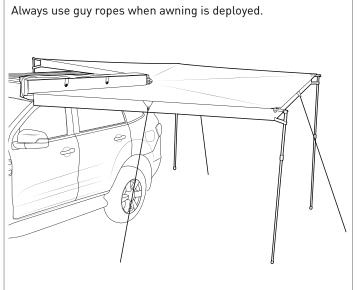


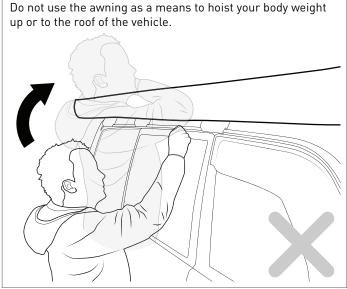


Be aware of the effects of wind on the open awning. It is advised that the awning be stowed away in strong winds. Do not leave your awning unattended while open, weather conditions can change suddenly. Avoid setup in windy conditions.

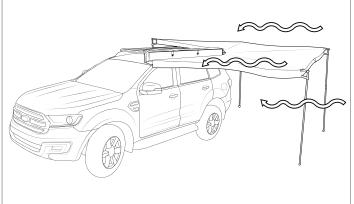

Warning: Shade does not provide 100% protection. Some UV can still reach you in the shade by reflecting off surrounding surfaces. Always combine shade with clothing, a hat, sunglasses and sunscreen.

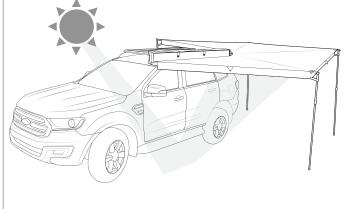

Parts List

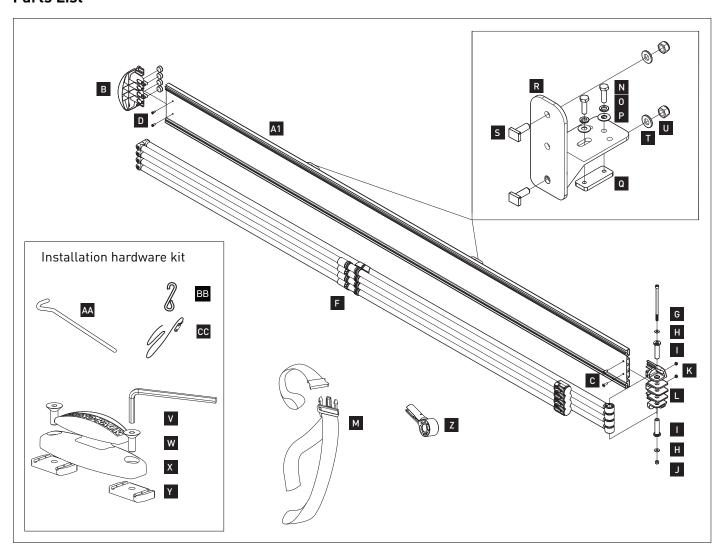



Item	Assembled Batwing	Qty
A1	Batwing Main Extrusion	1
A2	Batwing Bag	1
В	Batwing End Cap	1
С	M6 x 20mm CSK Screw	2
D	Phillips Screw	2
Е	Batwing End Cap Magnet	4
F	Batwing Spar Support	4
G	M8 x 150mm Axle Bolt s/s	1
Н	M8 x 17mm Flat Washer	2
I	Batwing Spar Hinge Pin	2
J	M8 Nyloc Nut	1
K	M6 Nyloc Nut	2
L	Spar Hinge Casting	1
М	Retention Strap	1

Item	Hardware kit	Qty
N	M6 x 20mm Hex Bolt	4
0	M6 Spring Washer	4
Р	M6 x 16mm Flat Washer	4
Q	Plate Nut	2
R	Pioneer Awning Bracket	2
S	M8 x 23mm T-bolt	4
Т	M8 x 17mm Flat Washer	4
U	M8 Nyloc Nut	4
V	Allen Key 4mm (H001)	1
W	M6 x 16mm CSK Screw	2
Х	Pickup Moulding (SP202)	1
Υ	M6 Channel Nut (N002)	2
Z	Spare Hinge Moulding	2
Item	Peg Bag	Qty
AA	Metal Peg	10
BB	Guy Rope 'S' Hook	4
CC	Guy Rope	8


Tools required

- T1 10 & 13mm Socket wrench
- T2 6mm Allen key
- T3 Hammer/mallet
- T4 Phillips head screwdriver

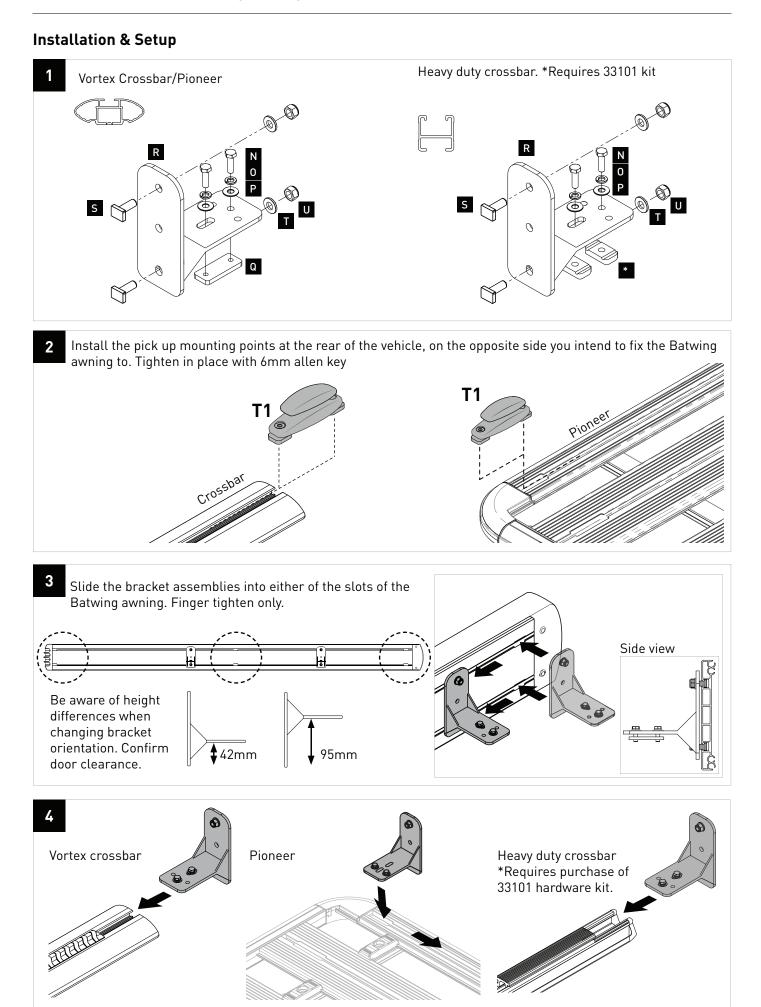


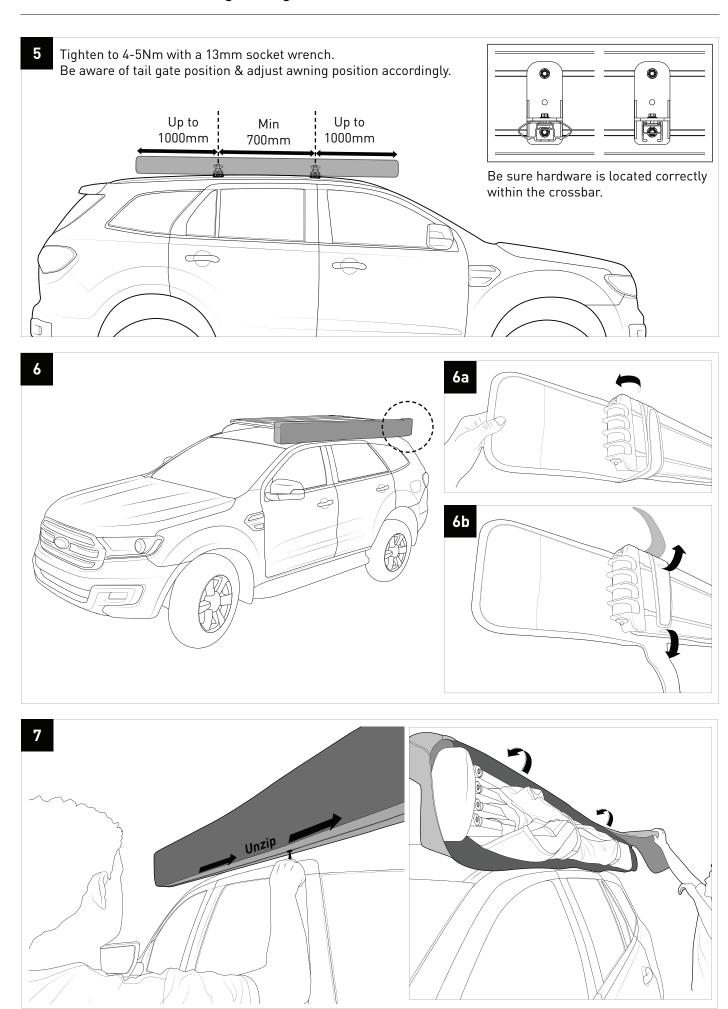

Page 5 of 12

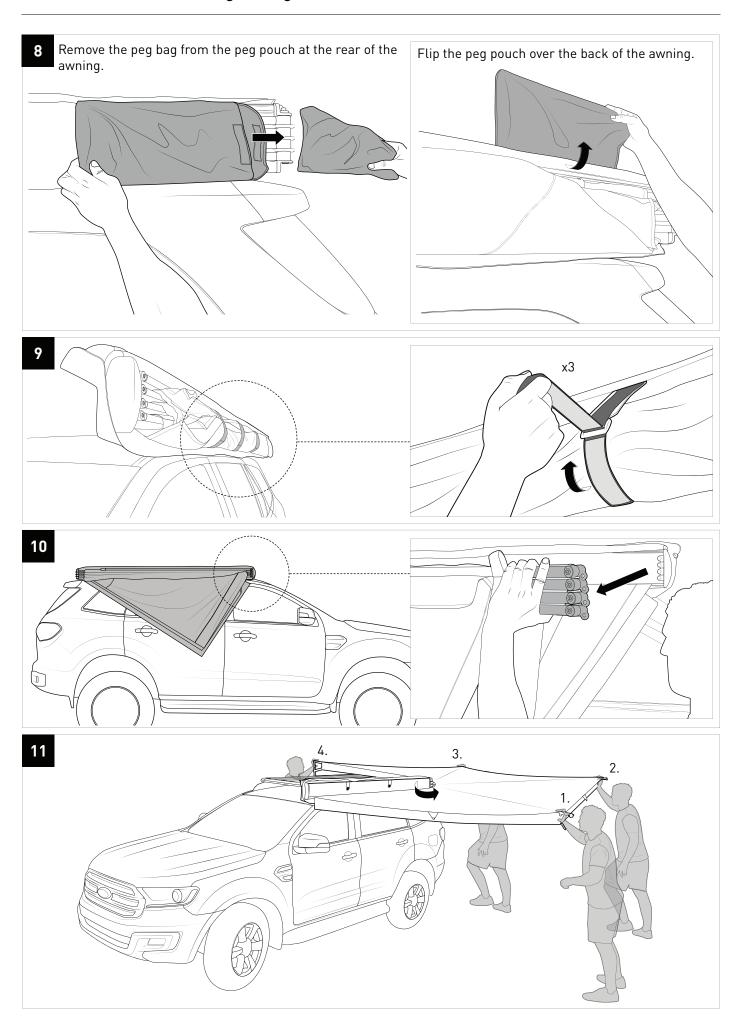

Page 6 of 12

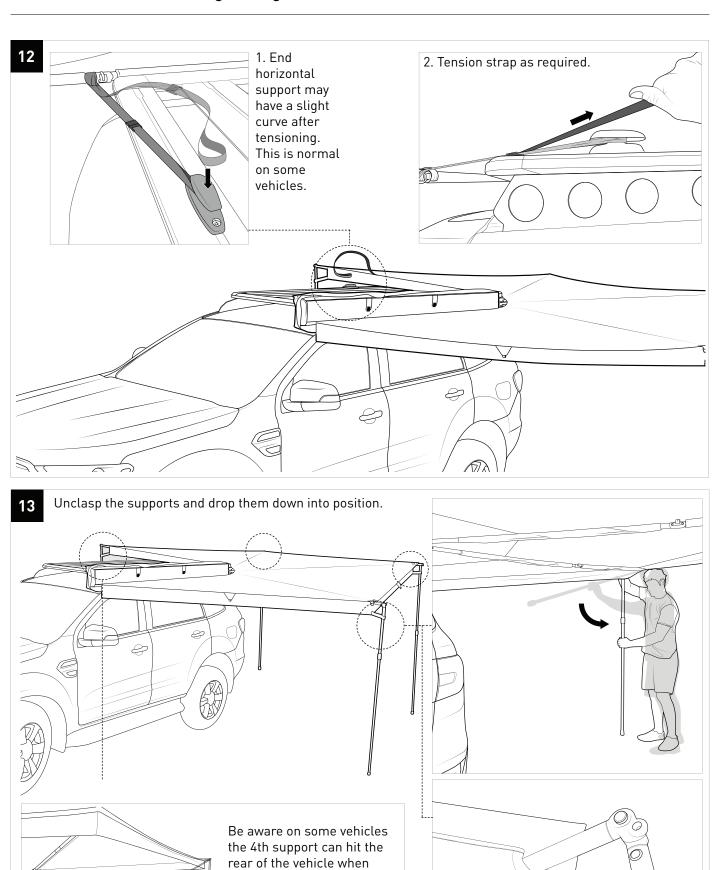


dropped down.


Undo the tension strap,
Drop the support,
Re-attach the retention


Simply:

strap.


33100 LH / 33200 RH Batwing Awning Instructions

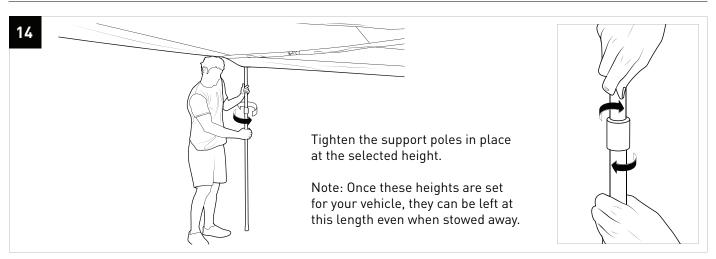


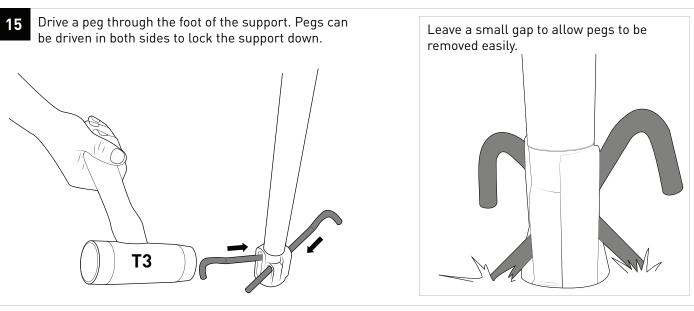


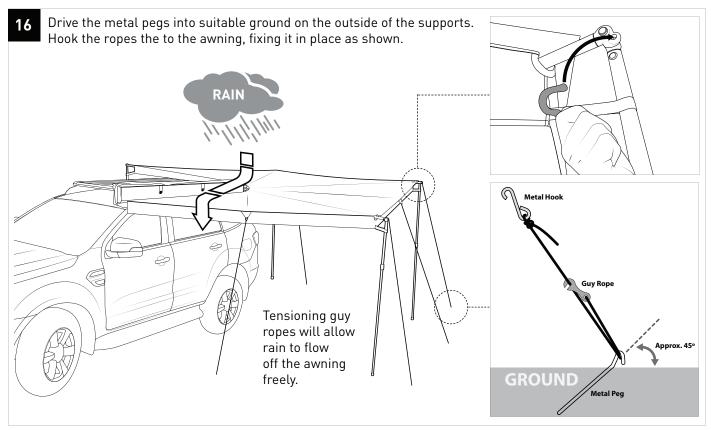


Stowage Instructions

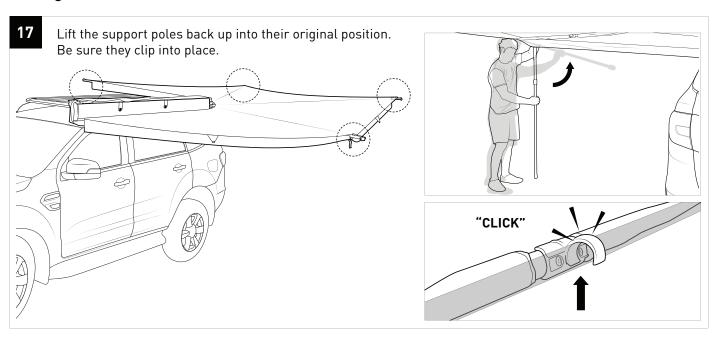

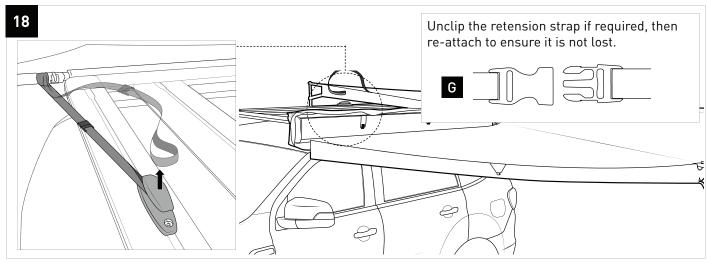

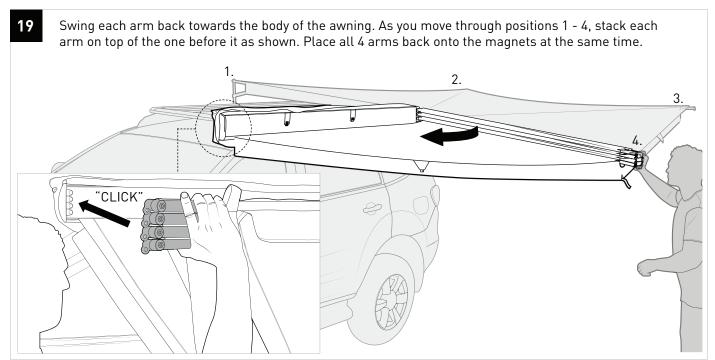


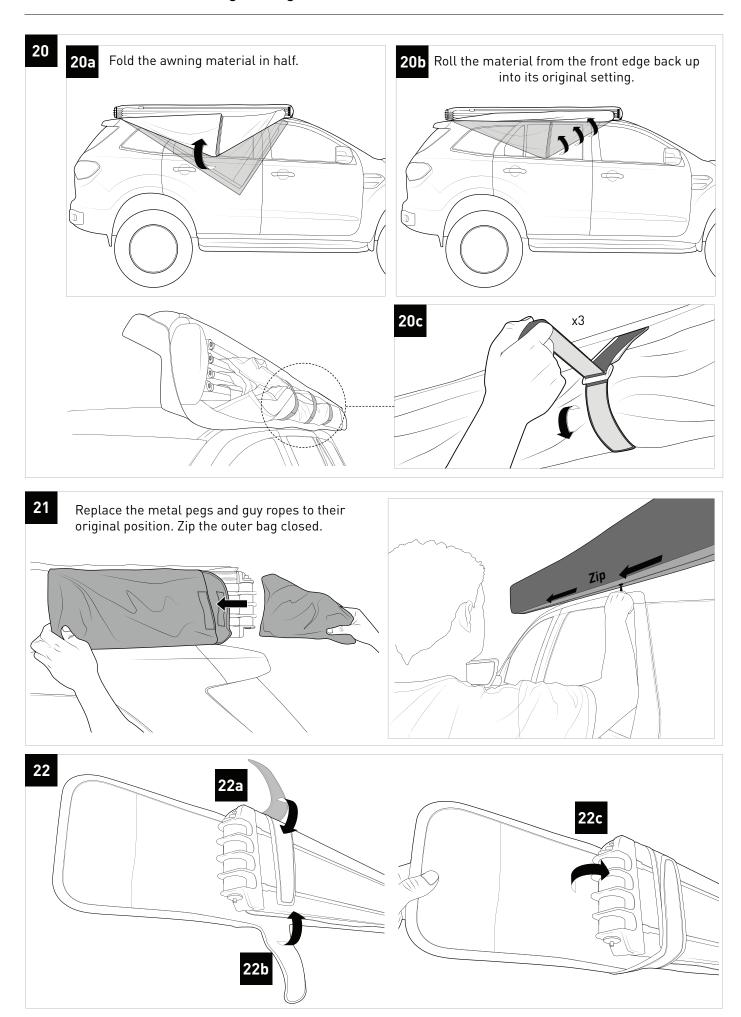

Page 10 of 12


Important Notes


The support arms are designed to allow slight adjustment by the end user. When housed, if the arms are not sitting flush with end cap (fig A), adjust the rotation on the arm using a phillips head screw driver.

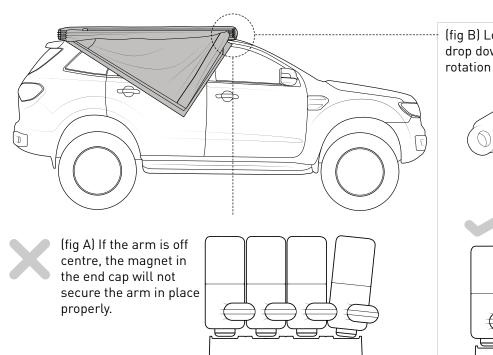

(fig B) Loosen the screw behind the drop down hinge, adjust the arm rotation and re-tighten the screw.

Spar hinges can be replaced with the spares provided. Remove awning from vehicle. Use a 13mm spanner & a 6mm allen key to undo the casting assembly.

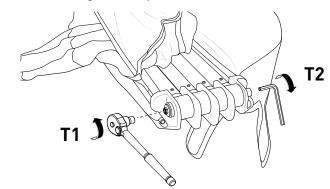

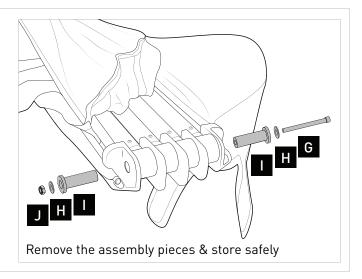

Using a phillips head screw driver, remove the screw holding the damaged hinge moulding in place. Replace with the spare hinge provided.

